

Hyundai and Kia Equipped With an 8-Speed Transmission Without Cooler Lines

INSTRUCTIONS



Wear safety goggles to protect your eyes.



Wear gloves to protect your hands.



Wear a long-sleeved shirt to protect your arms.

Some Kia and Hyundai models are equipped with an 8-speed transmission which do not have cooler lines

Adaptors required:

Note: This transmission needs to be in reverse for the duration of the service to achieve flow.




To perform service:

1. Remove the air box assembly from the vehicle.




2. Locate the fill port on top of the transmission.
3. Remove the clamp and vent hose.

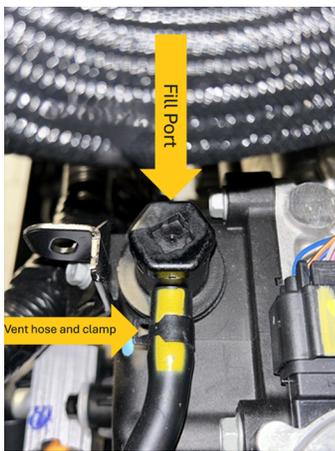

4. Install hose adaptor in place of vent hose.
5. Connect a service hose to adaptor.



6. Raise the vehicle.
7. Remove the splash shield from underneath the vehicle.
8. Locate the pressure port on the driver's side of the transmission.

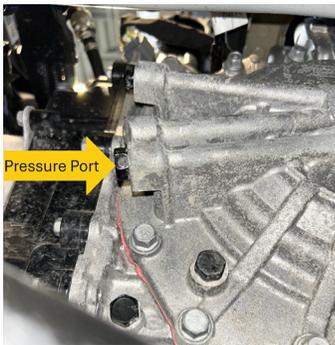

9. Remove pressure port bolt and install adaptor.
10. Connect a service hose.
11. Start the vehicle.
12. Place the vehicle in reverse and perform the Wynn's Transmission Service.
13. After the service is complete, place the vehicle in park and reverse the installation procedure.
14. Check fluid level per OEM procedure.